
One Call Process for Complex Excavation Projects

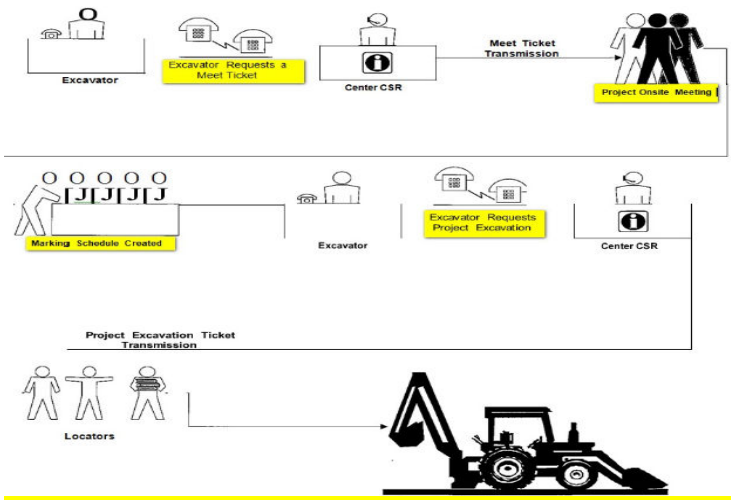

Complex (LPRJ) Project Meet

Its purpose is to coordinate an onsite meeting/communication between the excavator and facility owners so that a marking schedule can be set for the project.

Once a schedule has been determined the marking and notification requirements set forth in the Revised Code shall not apply.

Complex Project Meet Notice may include, but are not limited to, cross-country pipeline installation, seismic testing and large site development. ***A Complex Project Meet Notice is not a dig ticket.***

Complex excavation projects in which the work will begin within 48 hours (excluding weekends and legal holidays), or the work will be completed within 10 working days from the date of the call, are considered normal dig tickets. Normal dig tickets may sometimes include an onsite meeting.

To ensure that complex projects are approached with understanding among all parties involved, please review these recommendations:

- Prior to Placing Your Call to OHIO811….
  - Know the counties, cities or townships involved and know bounded by areas or locations with start and ending points.
  - Know the date, time and the location of the project meeting and meeting contacts.
  - It is suggested that you allow at least one weeks' time between the call to Ohio811 and requested meeting date.
  - Have Shape files of proposed project

- When You Place Your Call to OHIO811 for a Complex Project Meet Ticket…
  - Provide shape files to the center of projected project
  - In addition to contact information, the contractor should provide the scope of the project, including the work type and who the work is being done for. All subcontractors working on project should also be included.
  - The information will be entered and a dig notification will be created on the map by the CSR to determine which member facility owners could be affected.
    - Description Example: This is a 85 mile 12 inch natural gas pipeline project - will be starting in Seneca County 636 ft north of the intersection of Twp Rd 129 & Twp rd 120 just west of Twp Rd 129 - will continue through Seneca County and crossing Huron, Ashland, Medina and Wayne Counties and ending 19 feet south and 38.5 feet east of the intersection of Whitman Rd and S R 172 in Wayne County.
  - If the project involves more than one county, each county will receive a Complex (LPRJ) Project notice number.

- When the Excavator and Facility Owner Representatives Meet…
  - All contractors involved in the project should attend the meeting.
  - Bring any maps, drawings or shape files available for the project.
  - Assign a project name and determine phases for the project.
  - Set up the mutually agreed upon marking schedule for each phase of the project.
    - Example: Phase 1 – The south side of U S 224 approximately 1200 ft southeast of S R 53 - starting at a point approximately 600 ft south of U S 224 and going South crossing S R 100, continuing through Clinton Township and ending at S R 19, approximately 2700 feet south of U S 224.

- Placing Your Call to Ohio811 for Mdig Notice (Marking/Dig Notice request)…
  - When calling to request Mdig Notice, always reference the original Complex project meet notice number first. It is important that all of the subsequent phases are associated with this notice number.
  - Mdig Notiecs should be requested for each phase of the project, according to the mutually agreed upon marking schedule. They should be requested at least 48 hours (excluding weekends and legal holidays) prior to beginning that phase of the excavation.
  - Each phase will be given an Mdig notice number. Keep this Notice number for your records.